

Datasheet

LIA-MVD-200-L

Dual Phase Lock-In-Amplifier Module



Features	<ul style="list-style-type: none"> • BNC connectors for input and output signals • Rugged aluminum housing • Dual phase detection with X, Y and magnitude output • Working frequency 5 Hz ... 10 kHz, digital phase shifter 0 ... 360° • Parameter control by local switches and opto-isolated digital inputs • Optional reference oscillator module available
Applications	<ul style="list-style-type: none"> • Spectroscopy • Luminescence, fluorescence, phosphorescence measurements • Light scattering measurements • Opto-electronical quality control
Block Diagram	<p>The block diagram illustrates the internal architecture of the LIA-MVD-200-L. It starts with three main input paths: Voltage Input and Output, Current Input (via a Transimpedance Amplifier with Gain = 100kV/A), and Reference Input (via a Reference Comparator). The Reference path includes a Digital Phase-Shifter (Δφ = 0 ... 360°) and an Optocoupler Isolate Unit. The signal paths then pass through Programmable Gain AC and DC Amplifiers, followed by Lowpass-Filters (with bandwidths of 100Hz...1MHz/6dB and 3ms...10s/6/12 dB/Oct). The outputs are split into X and Y channels, with X-OUTPUT (R * cos(ε)) and Y-OUTPUT (R * sin(ε)), and a combined R-OUTPUT Magnitude. A Vector Summing Amplifier is also shown. The system includes an Overload Detector and an Unlocked Detector, which feed into the STATUS-OUTPUT. Control is managed by a Parameter Control Unit receiving signals from Manual Switches and CONTROL INPUTS.</p>

SOPHISTICATED TOOLS FOR SIGNAL RECOVERY



DE-LIA-MVD-200-L_R3/MG, JM/22/JUN2016

01/24 / V3 / CHHW / femto/lock-in/lia-mvd-200-l

Datasheet

LIA-MVD-200-L

Dual Phase Lock-In-Amplifier Module

Specifications	Test Conditions	$V_s = \pm 15 \text{ V}$, $T_A = 25 \text{ }^\circ\text{C}$
Voltage Input	Voltage input characteristic Voltage input range Voltage input coupling Voltage input impedance Voltage input noise Voltage input CMRR Voltage input gain drift	true differential instrumentation amplifier 3 μV ... 1V in 1-3-10 steps (for full scale output) AC 1 $\text{M}\Omega$ // 4 pF 12 nV/ $\sqrt{\text{Hz}}$ 110 dB @ 1 kHz, 100 dB @ 10 kHz 100 ppm/K
Current Input	Current input characteristic Current input range Current input noise Current input source-capacit. Current input gain error vs. Source capacitance	transimpedance amplifier, -100 kV/A (inverting) 30 pA ... 10 μA in 1-3-10 steps (for full scale output) 0.4 pA/ $\sqrt{\text{Hz}}$ 10 pF – 500 pF (recommended) Cs f < 10 kHz 10 pF < 1 % 100 pF < 1 % 1 nF < 2 %
Signal Filter (without optional Bandpass-Module)	Signal filter lowpass (–3 dB BW) Signal filter highpass (–3 dB BW) Signal filter cutoff accuracy Max. dynamic reserve	1 MHz *, 100 kHz, 10 kHz, 1 kHz, 100 Hz; 6 dB/oct. selectable per jumper 0.2 Hz, 1 Hz, 10 Hz, 100 Hz, 1 kHz; 6 dB/oct. selectable per jumper $\pm 20 \%$ 80 dB
Signal Monitor Output	Signal monitor output gain Signal monitor output voltage Signal monitor output impedance Signal monitor output current Note	1 ... 3333 (depends on gain setting) $\pm 8 \text{ V}$ max. 100 Ω $\pm 10 \text{ mA}$ max. When using current input with low input ranges, the monitor output may be disabled by opening the soldering jumper at the board (near JP1) to prevent from recoupling.
Demodulator	Demodulator dynamic reserve	15 dB @ Ultra Stable Setting 35 dB @ Low Drift Setting 55 dB @ High Dynamic Setting
Reference Input	Reference input voltage range Reference input impedance Reference acquisition time	$\pm 100 \text{ mV}$... $\pm 5 \text{ V}$ @ bip. mode (0 V comparator threshold) -5 V / $+10 \text{ V}$ @ TTL mode ($+2 \text{ V}$ comparator threshold) 1 $\text{M}\Omega$ max. 2 s @ fast setting max. 4 s @ slow setting
Phase Shifter	Phase shifter type Phase shifter range Phase shifter resolution Phase shifter drift Phase shifter accuracy Phase shifter orthogonality	digital, working frequency 5 Hz ... 10 kHz 0 ... $+ 360^\circ$ 1.4 $^\circ$ <100 ppm/K <0.3 $^\circ$ <0.1 $^\circ$
Time Constants	Time constant range Time const. filter characteristic	3 ms ... 10 s in 1-3-10 steps 6 dB/oct. or 12 dB/oct. switchable

SOPHISTICATED TOOLS FOR SIGNAL RECOVERY



Datasheet

LIA-MVD-200-L

Dual Phase Lock-In-Amplifier Module

Specifications (continued) Output	<p>Output channels X = in phase, Y = quadrature, R = magnitude</p> <p>Output voltage range ± 10 V (@ 2 kΩ load)</p> <p>Output current ± 5 mA max.</p> <p>Output impedance 50 Ω</p> <p>Output DC-stability 5 ppm/K @ ultra stable setting 50 ppm/K @ low drift setting 500 ppm/K @ high dynamic setting</p> <p>Output basic accuracy 2 % (X and Y-output) @ sinusoidal input signal 4 % (R-output) @ sinusoidal input signal</p> <p>Output voltage offset range ± 100 % full scale by ± 10 V control voltage</p> <p>Output voltage offset control-</p> <p>Output load impedance > 2 kΩ</p>																															
Status Indicator LED	<p>Functions amplifier overload status reference PLL unlocked status</p>																															
Digital Control	<p>Control input voltage low: -0.8 V ... $+0.8$ V, high: $+1.8$ V ... $+12$ V</p> <p>Control input current 0 mA @ 0V, 1.5 mA @ $+5$ V, 4.5 mA @ $+12$ V typ.</p> <p>Digital status output voltage Active: $+4.5$ V typ., Non Active: 0 V typ.</p> <p>Digital status output current 10 mA max.</p>																															
Power Supply	<p>Supply voltage ± 15 Vdc ... ± 18 Vdc</p> <p>Supply current -60 mA, $+100$ mA</p>																															
Case	<p>Material Aluminum anodized</p> <p>Dimension 64,4 x 105,0 x 223,0 mm (without BNC connectors)</p> <p>Weight 1000 g (2.2 lb)</p>																															
Temperature Range	<p>Storage temperature -40 ... $+100$ °C</p> <p>Operating temperature 0 ... $+60$ °C</p>																															
Absolute Maximum Ratings	<p>Signal input AC voltage 50 V_{pp}</p> <p>Reference input voltage ± 15 V</p> <p>Control input voltage -5 V, $+30$ V</p> <p>Power supply voltage ± 22 V</p>																															
Switch Settings	<p>4 dip switch - presettings</p> <table border="1"> <thead> <tr> <th>switch</th> <th>OFF</th> <th>ON</th> </tr> </thead> <tbody> <tr> <td>S1</td> <td>low drift & high dynamic</td> <td>ultra stable & low drift</td> </tr> <tr> <td>S2</td> <td>1-f mode</td> <td>2-f mode</td> </tr> <tr> <td>S3</td> <td>fast PLL-locking</td> <td>slow PLL-locking</td> </tr> <tr> <td>S4</td> <td>reference-input-threshold = 0 V</td> <td>reference-input-threshold = $+2$ V</td> </tr> </tbody> </table> <p>Sensitivity setting, output DC-gain modes</p> <table border="1"> <thead> <tr> <th>mode</th> <th>DC-gain</th> <th>dyn. reserve</th> <th>DC-stability</th> </tr> </thead> <tbody> <tr> <td>ultra stable</td> <td>10</td> <td>low</td> <td>high</td> </tr> <tr> <td>low drift</td> <td>100</td> <td>medium</td> <td>medium</td> </tr> <tr> <td>high dynamic</td> <td>1000</td> <td>high</td> <td>low</td> </tr> </tbody> </table> <p>If only low dynamic reserve is required, select the higher DC-stability settings. Use dip switch S1 to preselect either the two upper or the two lower DC-gain modes, then select best mode by sensitivity switch settings 0–7 or 8–F.</p>	switch	OFF	ON	S1	low drift & high dynamic	ultra stable & low drift	S2	1-f mode	2-f mode	S3	fast PLL-locking	slow PLL-locking	S4	reference-input-threshold = 0 V	reference-input-threshold = $+2$ V	mode	DC-gain	dyn. reserve	DC-stability	ultra stable	10	low	high	low drift	100	medium	medium	high dynamic	1000	high	low
switch	OFF	ON																														
S1	low drift & high dynamic	ultra stable & low drift																														
S2	1-f mode	2-f mode																														
S3	fast PLL-locking	slow PLL-locking																														
S4	reference-input-threshold = 0 V	reference-input-threshold = $+2$ V																														
mode	DC-gain	dyn. reserve	DC-stability																													
ultra stable	10	low	high																													
low drift	100	medium	medium																													
high dynamic	1000	high	low																													

SOPHISTICATED TOOLS FOR SIGNAL RECOVERY



Datasheet

LIA-MVD-200-L

Dual Phase Lock-In-Amplifier Module

Switch Settings (continued)

S1 = ON: sensitivity setting for full scale (= 10 V output)

ultra stable mode			low drift mode		
setting	voltage	current	setting	voltage	current
0	1 V	10 μ A	8	100 mV	1 μ A
1	300 mV	3 μ A	9	30 mV	300 nA
2	100 mV	1 μ A	A	10 mV	100 nA
3	30 mV	300 nA	B	3 mV	30 nA
4	10 mV	100 nA	C	1 mV	10 nA
5	3 mV	30 nA	D	300 μ V	3 nA
6	1 mV	10 nA	E	100 μ V	1 nA
7	300 μ V	3 nA	F	30 μ V	300 pA

S1 = OFF: sensitivity setting for full scale (= 10 V output)


low drift mode			high dynamic mode		
setting	voltage	current	setting	voltage	current
0	100 mV	1 μ A	8	10 mV	100 nA
1	30 mV	300 nA	9	3 mV	30 nA
2	10 mV	100 nA	A	1 mV	10 nA
3	3 mV	30 nA	B	300 μ V	3 nA
4	1 mV	10 nA	C	100 μ V	1 nA
5	300 μ V	3 nA	D	30 μ V	300 pA
6	100 μ V	1 nA	E	10 μ V	100 pA
7	30 μ V	300 pA	F	3 μ V	30 pA

Time constant setting

	6 dB/oct.	12 dB/oct.	time constant
0	8		3 ms
1	9		10 ms
2	A		30 ms
3	B		100 ms
4	C		300 ms
5	D		1 s
6	E		3 s
7	F		10 s

Phase shift setting

Phase shift is adjusted by 2 phase switches with 8 Bit resolution. Values 0 ... 255 (Hex 00 ... FF) correspond to phase shift setting 0 ... +360°. One step with switch marked "Coarse" changes phase shift by 22.5°. The "Fine"-switch changes phase shift by 1.4° - steps:

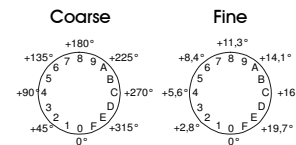

If 2-f mode is selected, the resolution of digital phase control changes to 2.8° and the phase shift range doubles to 0 ... + 720°.

SOPHISTICATED TOOLS FOR SIGNAL RECOVERY



Datasheet

LIA-MVD-200-L

Dual Phase Lock-In-Amplifier Module

Internal Jumper Settings
(jumpers are accessible
when top of case is
removed)

Input signal filter
setting


Set cut-off frequency of input lowpass filter
with JP1 + JP2 (always same position) and
highpass filter with JP3:

highpass -3 dB cut-off		lowpass -3 dB cut-off	
JP3		JP1, JP2	
3 - 4	0.2 Hz	1 - 2	100 Hz
1 - 3	1 Hz	3 - 4	1 kHz
2 - 4	10 Hz	5 - 6	10 kHz
3 - 5	100 Hz	7 - 8	100 kHz
4 - 6	1 kHz	none	1 MHz

Frequency range
selection

JP4	frequency range
1 - 2	normal operation
3, 4, 5, 6, 7, 8	test pins, do not use

Internal Jumper Position
Diagram
(look at top of board when
case is opened)

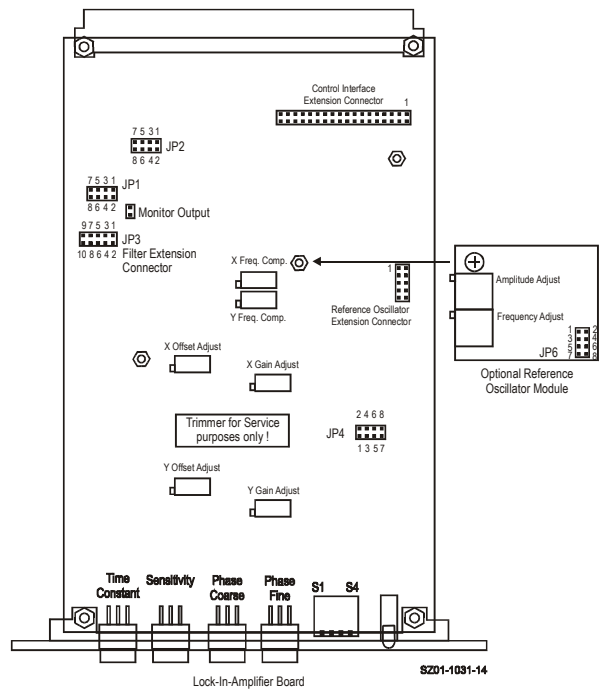

SOPHISTICATED TOOLS FOR SIGNAL RECOVERY



Datasheet

LIA-MVD-200-L

Dual Phase Lock-In-Amplifier Module

Internal Connector
(of build-in Lock-In Board)

Connector type	Euro-card DIN 41612 connector, 64 pin male, (a+c)
Input	Pin C2: voltage input, non-inverting, DC-coupled Pin C3: voltage input, non-inverting, AC-coupled Pin C4: voltage input, inverting, AC-coupled Pin C5: voltage input, inverting, DC-coupled Pin C7: current input Pin C6: current amplifier voltage output Pin A2- A6: input GND
Monitor output	Pin C9: monitor output Pin A9: monitor GND
Output	Pin A12: R-signal output Pin C14: X-signal output Pin A14: Y-signal output Pin C15: output GND
Offset input	Pin A10: X-offset input Pin A11: Y-offset input Pin A13: offset GND
Status output	Pin C10: unlocked status output Pin C11: overload status output Pin C17: status output GND (=power supply GND)
Power supply	Pin A16+C16: power supply – 15V Pin A18+C18: power supply + 15V Pin A17+C17: power supply GND
Remote control inputs (opto-isolated)	Pin C19: time constant (TC0) Pin A19: time constant (TC1) Pin C20: time constant (TC2) Pin A20: time constant slope (TCSL) Pin A22: sensitivity (SEN0) Pin C21: sensitivity (SEN1) Pin A21: sensitivity (SEN2) Pin C22: dynamic mode (DYN0) Pin A28: phase shift (PH0) Pin C28: phase shift (PH1) Pin A27: phase shift (PH2) Pin C27: phase shift (PH3) Pin A26: phase shift (PH4) Pin C26: phase shift (PH5) Pin A25: phase shift (PH6) Pin C25: phase shift (PH7) Pin C24: disable local switch control Pin A23+A24: remote control GND (common optocoupler cathode)
Reference input	Pin A32: reference input Pin A31: reference input ground
Reference output (Connected only if optional oscillator module is installed)	Pin A30: reference output Pin A17: refer. output GND (=power supply GND) Pin A29: reference synchronization input
Standard control interface (Connected only if optional control interface module (future product) is installed)	Pin C29: interface 0 Pin C30: interface 1 Pin C31: interface 2 Pin C32: interface 3

SOPHISTICATED TOOLS FOR SIGNAL RECOVERY



Datasheet

LIA-MVD-200-L

Dual Phase Lock-In-Amplifier Module

External Connectors
(at backside, Standard
Configuration)

Signal input	Factory set to BNC, isolated (single ended)
X-output	BNC
Y-output	BNC
R-output	BNC
Reference input	BNC
Power supply	Lemo® series 1S, 3-pin fixed socket (mating plug type: FFA.1S.303.CLAC52) Pin 1: +15V Pin 2: -15V Pin 3: GND



Control port	Sub-D 25-pin, female, qual. class 2 Pin 1: +12V (stabilized power supply output) Pin 2: -12V (stabilized power supply output) Pin 3: AGND (analog ground) Pin 4: +5V (stabilized power supply output) Pin 5: X-output Pin 6: overload status output Pin 7: unlocked status output Pin 8: disable local switch control input Pin 9: DGND (ground f. digital control pin 8 - 25) Pin 10: dynamic mode (DYN0) Pin 11: sensitivity (SEN0) Pin 12: sensitivity (SEN1) Pin 13: sensitivity (SEN2) Pin 14: time constant slope (TCSL) Pin 15: time constant (TC0) Pin 16: time constant (TC1) Pin 17: time constant (TC2) Pin 18: phase shift (PH0) Pin 19: phase shift (PH1) Pin 20: phase shift (PH2) Pin 21: phase shift (PH3) Pin 22: phase shift (PH4) Pin 23: phase shift (PH5) Pin 24: phase shift (PH6) Pin 25: phase shift (PH7)
--------------	---

Connector Wiring Options

General	The BNC-connector configuration can be easily changed by setting electrical jumpers at the internal I/O-adaptor card. Disconnect the power supply and open the case by loosening the two upper screws at the case front and rear side. Please pay attention to the ground connection at the backplane. Now open the case by lifting the top. The jumper options and functions are described in the following table.
---------	---

SOPHISTICATED TOOLS FOR SIGNAL RECOVERY



Datasheet

LIA-MVD-200-L

Dual Phase Lock-In-Amplifier Module

Connector Wiring Options,
Jumpers on internal
Adapter Board

Input connectors (JP1)	input wiring	jumper installed
	IN A = voltage input (single ended, AC)	" +V-IN → IN A" " GND → IN A/SHLD" " -V-IN → IN A/SHLD"
	IN A = voltage input (differential, AC)	" +V-IN → IN A" " -V-IN → IN A/SHLD"
	IN A / IN B = voltage input (2 BNC differential, AC) (OUT A cannot be used)	" +V-IN → IN A" " GND → IN A/SHLD" " -V-IN → IN B"
	IN A = current input (single ended)	" C-IN → IN A" " GND → IN A/SHLD" " -V-IN → C-OUT" " +V-IN → GND"
Output connectors (JP2)	output wiring	jumper installed
	OUT A = X-output	" X → OUT A" (JP1) "USE OUT A/NO IN B"
	OUT B = X-output	" X → OUT B"
	OUT A = Y-output	" Y → OUT A" (JP1) "USE OUT A/NO IN B"
	OUT B = Y-output	" Y → OUT B"
	OUT C = Y-output	" Y → OUT C"
	OUT A = R-output	" R → OUT A" (JP1) "USE OUT A/NO IN B"
	OUT B = R-output	" R → OUT B"
	OUT C = R-output	" R → OUT C"
	OUT B = monitor output	" MON → OUT B"
	OUT C = monitor output	" MON → OUT C"
	OUT B = unlocked output	" UNL → OUT B"
	OUT C = unlocked output	" UNL → OUT C"
	OUT B = Overload output	" OVL → OUT B"
	OUT C = overload output	" OVL → OUT C"
OUT C = reference output	" REF-OUT → OUT C"	
Reference connector (JP3)	reference wiring	jumper installed
(Reference output only if optional oscillator module is installed)	REF = reference input	" REF-IN → REF" (2 jumper)
	REF = reference output (reference output connected to ref. input)	" REF-OUT → REF-IN" (2 jp.) " REF-IN → REF" (2 jumper)
	REF = refer. sync. input (use OUT C as reference output)	" REF-SYNC → REF" (2 jp.)

SOPHISTICATED TOOLS FOR SIGNAL RECOVERY



Datasheet

LIA-MVD-200-L

Dual Phase Lock-In-Amplifier Module

Remote Control Operation

General

Remote control input bits are opto-isolated and connected by logical OR to local switch setting. The 4 hexadecimal switches are 4 Bit-coded as shown in the following table:

switch code	MSB			LSB
	Bit 3	Bit 2	Bit 1	Bit 0
0	Low	Low	Low	Low
1	Low	Low	Low	High
2	Low	Low	High	Low
3	Low	Low	High	High
4	Low	High	Low	Low
5	Low	High	Low	High
6	Low	High	High	Low
7	Low	High	High	High
8	High	Low	Low	Low
9	High	Low	Low	High
A	High	Low	High	Low
B	High	Low	High	High
C	High	High	Low	Low
D	High	High	Low	High
E	High	High	High	Low
F	High	High	High	High

For remote control a switch setting, set the local switch to "0" and select the wanted setting via the 4-bit-code at the corresponding digital inputs.

Sensitivity switch -
corresponding inputs

Bit	corresponding control port input	
Bit 0	SEN0	(Pin A22)
Bit 1	SEN1	(Pin C21)
Bit 2	SEN2	(Pin A21)
Bit 3	DYNO	(Pin C22)

Time constant switch -
corresponding inputs

Bit	corresponding control port input	
Bit 0	TC0	(Pin C19)
Bit 1	TC1	(Pin A19)
Bit 2	TC2	(Pin C20)
Bit 3	TCSL	(Pin A20)

Phase switch coarse -
corresponding inputs

Bit	corresponding control port input	
Bit 0	PH4	(Pin A26)
Bit 1	PH5	(Pin C26)
Bit 2	PH6	(Pin A25)
Bit 3	PH7	(Pin C25)

Phase switch fine -
corresponding inputs

Bit	corresponding control port input	
Bit 0	PH0	(Pin A28)
Bit 1	PH1	(Pin C28)
Bit 2	PH2	(Pin A27)
Bit 3	PH3	(Pin C27)

Remote control example

For example, to select a switch setting code "6", you have to connect a "high"- level signal to the corresponding control input pins Bit 1 & Bit 2. Mixed operation, e.g. local phase settings and remote controlled sensitivity setting, is also possible.

SOPHISTICATED TOOLS FOR SIGNAL RECOVERY




Datasheet

LIA-MVD-200-L


Dual Phase Lock-In-Amplifier Module

Dimensions


Top View

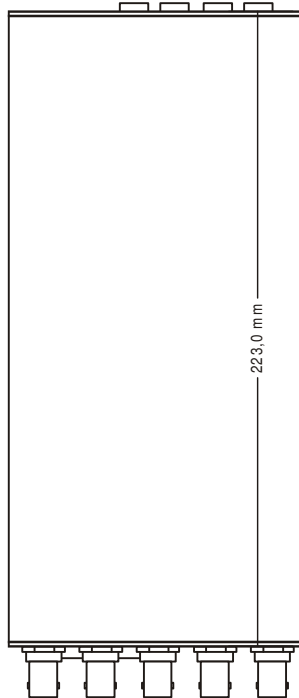

Front View

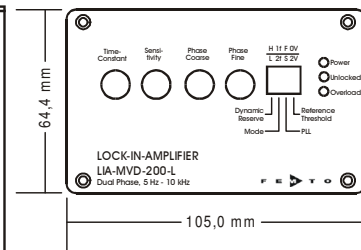

Back View

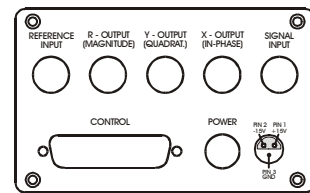

Case Material:
Al, natural anodised DZ01-1073-10

Optional Extensions

- | | |
|-----------------------------|--|
| Reference oscillator module | Model No.: SOM-1
- frequency range 5 Hz ... 130 kHz, user adjustable
- output voltage 0 ... 2 V _{RMS} , user adjustable
- 100 ppm/K amplitude accuracy |
| Factory set | 1 kHz, 1 V _{RMS} |

Specifications are subject to change without notice. Information provided herein is believed to be accurate and reliable. However, no responsibility is assumed by FEMTO Messtechnik GmbH for its use, nor for any infringement of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of FEMTO Messtechnik GmbH. Product names mentioned may also be trademarks used here for identification purposes only.

© by FEMTO Messtechnik GmbH · Printed in Germany

SOPHISTICATED TOOLS FOR SIGNAL RECOVERY

